

CamCrusher User Manual



Powered By



Table of Contents

Safety And Product Information

Installation

Getting Started

Connecting Your Device

Application Features

CamCrusher Device

CamCrusher



Safety and Product Information

Failure to heed the following warnings could result in death, serious injury, or property damage.

Distraction Warning

This device is intended to enhance the situational awareness when used properly. If used improperly, you could become distracted by the display, which could lead to an accident causing serious personal injury or death. Only access the information displayed on the device with a glance. Always maintain awareness of your surroundings and do not stare at the display or become distracted by the display. Focusing on the display could prevent you from avoiding obstacles or hazards.

Vehicle Installation Warnings

When installing the device in a vehicle, do not place the device where it obstructs the driver's view of the road, blinds the driver or interferes with vehicle operating controls, such as the steering wheel, foot pedals, or transmission levers. Do not place unsecured on the vehicle dashboard. Do not place the device in front of or above any airbag.

Battery Warnings

A lithium-ion battery is used in this device. If these guidelines are not followed, batteries may experience a shortened life span or may present a risk of damage to the device, fire, chemical burn, electrolyte leak, and/or injury.

- Do not expose the device or batteries to fire, explosion, or other hazard.
- Do not disassemble, modify, remanufacture, puncture, or damage the device or batteries.
- Do not remove or attempt to remove the non-user replaceable battery.

Device Warnings

- Do not immerse the device or batteries in water or other liquids.
- To avoid possible device damage, do not leave the device exposed to a heat source or in a high-temperature location, such as in the sun in an unattended vehicle.
- Do not operate the device outside of the following temperature range: from -20° to 55°C (from -4° to 131°F). Do not store the device for an extended time outside of the following range: from 0° to 25°C (from 32° to 77°F).
- Do not use a power cable, data cable, and/or power adapter that is not certified.

Battery Notices

Contact your local waste disposal department to dispose of the device/batteries in accordance with applicable local laws and regulations.

FCC Compliance Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide more reasonable protection against harmful interference in a residential installation.

Operation is subjected to the following two conditions: (1) This device may not cause harmful interference, and (2) the device must accept any interference received, including interference that may cause undesired operation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help.

User Responsibility

Cam Crusher LLC. bears no responsibility for and hereby disclaims all liability for any fines, penalties or damage incurred by a driver for violations of the law.


If you are outside of the area covered by your mobile data plan, you may not receive speed trap and redlight location data.

The CamCrusher device is intended for lawful and responsible use only. Misuse of this device, including but not limited to tampering with the device, placing device in direct contact with eyes or using the device to infringe on others, may result in serious consequences. Violating local, state, or federal laws with this device can lead to legal action and penalties. Always adhere to the user guidelines and respect the privacy and safety of others when using CamCrusher.

Installation

iOS (Apple) Devices:


Go to App Store and search for “CamCrusher”

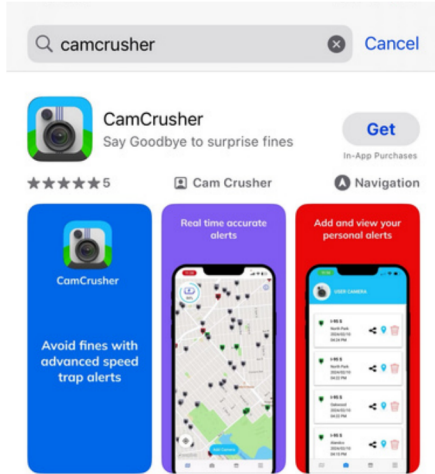

Install the app from the store.

Android Phones:

Search for “CamCrusher” and install.

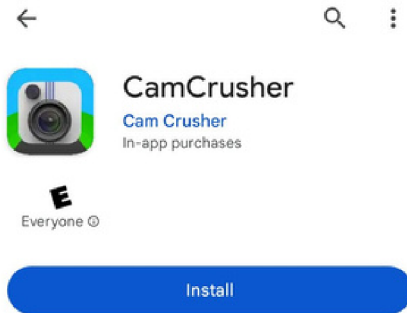

Alternatively, you can download it directly from the CamCrusher website.

Starting the App for the First Time

When you start the Cam Crusher app for the first time, you'll see the following screens:

For iOS Phones

- **“CamCrusher Would Like to Use Bluetooth”**. You are asked if the app can use Bluetooth services. You must agree to this in order for the app and device to work you must allow the app access to Bluetooth.
- **“Allow CamCrusher to use your location”**. You are asked if the app can use your current location. You must agree to allow while using App this so that the app can find your location on the map.
- **“CamCrusher Would Like to Send You Notifications”**. You are asked if the app can display notifications on your device. You must agree to this so that the app can notify you of important alerts.

For Android Phones

- Location Permission. You are asked if the app can use your current location. You must agree to allow while using the app this so that the app can find your location on the map. Allow CamCrusher to Access this device's location. Choose **“While using app”**
- Bluetooth Permission. You are asked if the app can use Bluetooth services. You must agree to this so that the app can connect to your CamCrusher device. Allow CamCusher to find, connect to, and determine the relative position of nearby devices? Choose **“Allow”**
- Permission. please select allow all the time option to enable permission to access the location in the background to fetch nearby cameras from the user's current location in the background. Choose **“OK”**. On the location permission screen choose **“Allow all the time”**
- Allow CamCrusher to send you notifications? Choose **“Allow”** You must agree to this so that the app can inform you of important alerts.

Choose your Plan


The next step is to choose your CamCrusher plan.

At the top of the “Map screen”, there will be an option to “Go Premium”. Additionally, in Settings > Account, you can also choose your subscription.

CamCrusher offers two subscription models: a Yearly Plan for \$47.99 or a Monthly Plan for \$6.99 per month. Both options renew automatically.

Connect Your Device

1. Open the app menu and select:
 - Connections
 - Bluetooth®
2. Connect to your device from the list of available devices. If multiple devices are in range, they will be listed on this screen.
3. Once your device is connected, the middle lights will illuminate for a few seconds to confirm the connection.

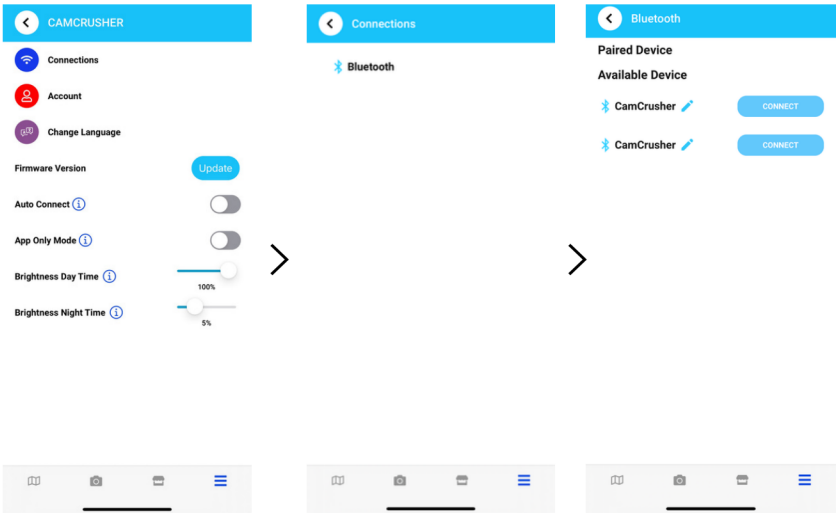

*Additionally by clicking the pencil icon you can rename your device from this page.

Application Features

Checking and Updating Your Device Firmware

1. Ensure your device is connected.
2. Open the Settings menu and click on “**Update**” by Firmware.
3. This page will display whether there is an available firmware update and if your device is up to date.
4. To update your firmware, select “**Upload Firmware**”.
5. Important: ⚠ Stay within range of your device until the upload is complete.
6. Once the update is complete, the “**Your firmware is up to date now!**” page will be displayed, with the option to check for additional updates.

Change Language

CamCrusher currently supports two languages: **English** and **Spanish**. Please select the language which you are most comfortable with.

Auto Connect

The Auto Connect feature is an innovative function that automatically connects your device to the app when it comes within range. Additionally, it places your app into hibernate mode when your device is out of range from your mobile phone. Keep this feature enabled for a seamless and effortless experience with CamCrusher.

App Only Mode

This feature activates audio warnings and is particularly useful if your device is unavailable. It also disables the hibernate mode, keeping the application running continuously. Please note that App Only Mode may drain your mobile device's battery quickly.

Brightness - Daytime

- Select your preferred alert brightness (we recommend setting it to 100%).
- This setting controls the device's brightness during the day.

Brightness - Nighttime

- Select your preferred alert brightness (we recommend setting it to 5%).
- This setting controls the device's brightness at night and will automatically adjust based on the time of day.

Within the Main Menu

Share

This option allows you to share the application with your friends and family.

Help Section

Contact Us

This section contains our contact information. We are here to help!

Frequently Asked Questions

Here we have listed users commonly asked support questions.

Report

If you are experiencing any issues with the application, you can report them here. Our developers will quickly address and resolve the problem.

Legal Terms

Privacy Policy

Your privacy is important to us, here you can read our policy and how we use and protect your information.

Terms & Conditions

View our terms and conditions of use here.

Map Screen


The map screen displays a radius of speed and red-light camera locations around your current location.

- Speed Traps: Displayed as gray cameras. 🚦
- Red-Light Traps: Displayed as red cameras. 🚦
- Personal Alerts: Displayed as green cameras. 🚦

When connected to your device, the map screen will show the CamCrusher device battery level at the top left corner.


Add Camera: The button at the bottom allows you to add personal alerts via your mobile phone. These alerts are based on your current location and direction of movement. They will activate approximately 500 feet before your marked location and will remain active for around 150 feet after.

Recenter: The button at the bottom left repositions your location at the center of the map.

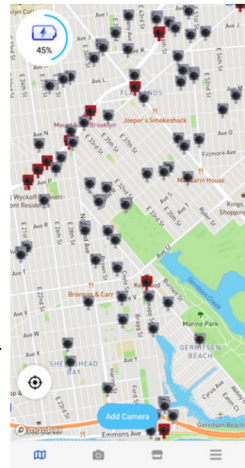

User Camera Page

On this page, you can view all your personal alerts. You can also delete them, share them with friends and family, and view them on the map.

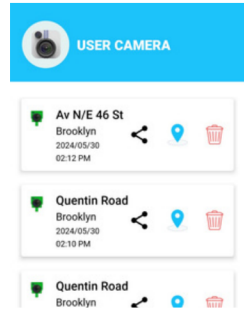


Sharing a Personal Alert

To share an alert press the share icon.




From these pages, you have the option to share via available applications such as SMS, WhatsApp, Email, and more.

iOS share screen

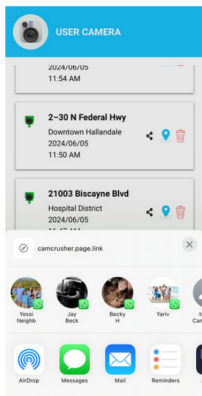


Android share screen

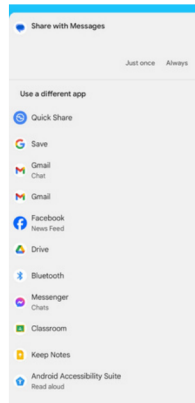

To view the location on a personal alert press on the map pin icon.



To delete an alert simply press on the trash can icon.

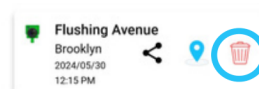

Cam Crusher Purchase Page

Easily order additional devices directly from your mobile app.

To order your device simply fill out the required fields, including your name, address, email, and payment method. Orders typically ship within 1 to 2 business days.



The CamCrusher Device


Vehicle Installation


- It is recommended to place your device within easy reach.
- Ensure that the device lights do not blind the driver during the day or night when illuminated.
- Please use the provided adhesive tape to secure your device, ensuring it does not move when the vehicle is in motion.


Charging Your Device


1. Connect cable: Use the supplied cable to connect to a power source. The small end of the cable plugs into the device, and the other end plugs into a USB or USB-C wall charger or vehicle output.
2. Check indicator: While charging, an indicator light will show the charging status. When charging RED and GREEN lights will be illuminated once fully charged the RED light will shut off. Unplug when fully charged.

Included magnetic smart cable

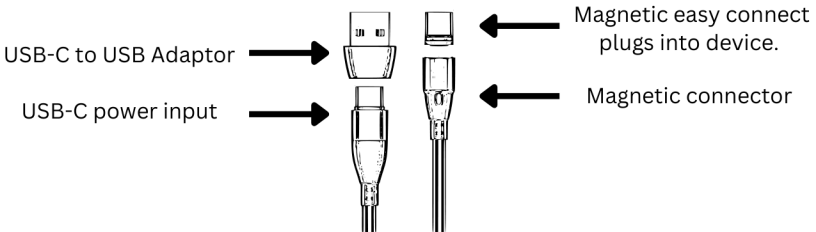

 Plug Magnetic easy connect connector into device.

  The magnetic connectors easily connect for charging



Depending on your connector you can use the USB-C or connect the adaptor for standard USB connection.

Activating the Overcast feature

On cloudy days or darker environments, you can easily dim your device to 35% brightness for a more comfortable driving experience in darker environments. To activate the Overcast feature, press and hold the CamCrusher device button for 3 seconds. A confirmation flash will blink twice.



Adding a Personal Camera from the Device

To add a personal alert from your device, simply press the CamCrusher device button. A confirmation flash will indicate that a camera has been added and a green camera icon will populate the map on the application.



Applying the included adhesive tape

Included with your CamCrusher device are double-sided adhesive tape squares to secure it to your vehicle dashboard. Peel off one side of the tape and place it in the center of your device. Then peel off the other side and press the device securely onto your dashboard.

